



Original	Recharge
 Standby	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 S.Mode	 Sound / Title
 Audio/Tv/Radio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Eject/Auto	 Eject / Surround
 P.Mode	 Picture / Format
 Zoom/Hold	 Zoom / Size
 Sleep	 Sleep / Timer

Original	Recharge
 D.Menu/Index	 D.Menu / Top
 Goto/Subpage	 Text / Goto
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Angle/Text	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-



