





 
 



 

 















 
 

 
 




Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ASPECT	 Format
 P.C.	 Pre Ch
 MENU	 Menu
 SOURCE	 Shift + AV
 Up	 Up

Original	Rechange
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 CH +	 Ch +
 CH -	 Ch -
 Sound	 Dual
 PIC	 Shift + Format
 NICAM	 Media
 SLEEP	 Sleep
 TV	 Smart
 AV	 AV
 HDMI	 Shift + Media





	Original	Rechange	
	SCART1	SUBT	Subt
	Y.PB.PR	SHIFT +  SUBT	Shift + Subt
	RECALL	RETURN BACK	Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Reveal	PLAY MODE	Play
	Hold		Pause
	List	LIST	List
	Index		Stop
	Subpage	REC MODE	Rec
	Size	ECO 3D	3D
	Auto	-/- GUIDE	Guide
	Text	REPEAT TEXT	Text

Original	Rechange

