





































Original		Rechange	
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	Game		Display / Media
	Auto		Smart / List
	Info		Info / Angle

Original		Rechange	
	Menu		Menu / Home
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	Up		Up
	CH+		CH+ / Page+
	Right		Right
	Vol+		Vol+
	OK		OK
	CH-		CH- / Page-
	Down		Down
	Red		Red / Netflix / Search
	Zoom		Zoom / Size
	Green		Green / APP / Repeat
	Lan/Audio		Audio / Lang I/II
	Yellow		Yellow / YouTube / Repeat



