



Original	Recharge	Original	Recharge
	On		Power
	Off		Shift + Power
	1/OPT 1		1
	2/OPT 2		2
	3/COAX 1		3
	4/COAX 2		4
	5/Phono		5
	6/Line 1		6
	7/Line 2		7
	8/USB		8
	9/BT		9
	Disp/Info		Info / Angle
	+10/Sleep		Guide / EPG / -/-
	Scan/Tune/Source		>> / Tune+
	Mute		Mute / Dimmer
	Vol+		Vol+
	<<		<< / Tune-
	DIM		Shift + Mute / Dimmer
	Vol-		Vol-
	SPK A/CD		Smart / List
	Up		Up
	SPK B/USB		Display / Media
	Left		Left
	Enter		OK
	Right		Right
	Menu/SRC		Menu / Home
	Down		Down
	Tone DFT/OPT		Back / Return
	Stop/Tone		Stop / Hold
	I<</Preset		I<< / Preset-
	Play/AM/FM/DB		Play / Slow
	Preset >>I		>>I / Preset+
	Red/Rand/Tuner		Red / Netflix / Search
	Green/RPT/Blen		Green / APP / Repeat





Original	Recharge
 On	 Power
 Off	 Shift + Power
 1/OPT 1	 1
 2/OPT 2	 2
 3/COAX 1	 3
 4/COAX 2	 4
 5/Phono	 5
 6/Line 1	 6
 7/Line 2	 7
 8/USB	 8
 9/BT	 9
 Disp/Info	 Info / Angle
 0	 0
 +10/Sleep	 Guide / EPG / -/-
 Scan/Tune/Source	 >> / Tune+
 Mute	 Mute / Dimmer
 Vol+	 Vol+

Original	Recharge
 <<	 << / Tune-
 DIM	 Shift + Mute / Dimmer
 Vol-	 Vol-
 SPK A/CD	 Smart / List
 Up	 Up
 SPK B/USB	 Display / Media
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu/SRC	 Menu / Home
 Down	 Down
 Tone DFT/OPT	 Back / Return
 Eject/Auto Tune	 Eject / Surround
 Stop/Tone	 Stop / Hold
 Pause	 Pause / Step / Freeze
 I<<< Preset	 I<<< / Preset-
 Play/AM/FM/DB	 Play / Slow





Original	Recharge	Original	Recharge
PRESET Preset >>	PRESET+ >> / Preset+		
TUNER MODE Red/Rand/Tuner	NETFLIX Red / Netflix / Search		
BLEND Green/RPT/Blen	APP Green / APP / Repeat		
MEMORY Yellow/Prog/Memo	YouTube Yellow / YouTube / Repeat		
DELETE Blue/Clear/Delete	Prime Video Blue / Prime Video / Random		





Original	Rechange
On	Power
Off	Shift + Power
Disp/Info	Info / Angle
Mute	Mute / Dimmer
Vol+	Vol+
DIM	Shift + Mute / Dimmer
Vol-	Vol-
Up	Up
Left	Left
Enter	OK
Right	Right
Menu/SRC	Menu / Home
Down	Down
Stop/Tone	Stop / Hold
Pause	Pause / Step / Freeze
I<< Preset	I<< / Preset-
Play/AM/FM/DB	Play / Slow

Original	Rechange
Preset >>	>> / Preset+
Red/Rand/Tuner	Red / Netflix / Search
Green/RPT/Blen	Green / APP / Repeat





Original	Recharge
On	Power
Off	Shift + Power
1/OPT 1	1
2/OPT 2	2
3/COAX 1	3
4/COAX 2	4
5/Phono	5
6/Line 1	6
7/Line 2	7
8/USB	8
9/BT	9
Disp/Info	Info / Angle
0	0
Scan/Tune/Source	>> / Tune+
Mute	Mute / Dimmer
Vol+	Vol+
<<	<< / Tune-

Original	Recharge
Vol-	Vol-
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
I<< Preset	I<< / Preset-
Play/AM/FM/DB	Play / Slow
Preset >>I	>>I / Preset+
Red/Rand/Tuner	Red / Netflix / Search
Green/RPT/Blen	Green / APP / Repeat
Yellow/Prog/Memo	Yellow / YouTube / Repeat
Blue/Clear/Delete	Blue / Prime Video / Random

