






 















 




 



 























 


 

 










Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	Power		Power		Green		Green / APP / Repeat
	1		1		Yellow		Yellow / YouTube / Repeat
	2		2		Blue		Blue / Prime Video / Random
	3		3		V +		Vol+
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		P +		CH+ / Page+
	9		9		V -		Vol-
	C		Setup / OPT /		Down		Down
	0		0		P -		CH- / Page-
	Saturn		Display / Media		Back		Back / Return
	Book		Picture / Format		i		Info / Angle
	N9UF		Shift + 9		<<		<< / Tune-
	Text		Text / Goto		I<<		I<< / Preset-





Original

Recharge

	NAV		Smart / List
	>>		>> / Tune+
	>>I		>>I / Preset+
	Play / Pause		Play / Slow
	Play / Pause		Shift + Play /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
		Menu / Home

Original

Recharge

