

 







 
 
 


 
 



 




 

 

 



 
 
 

 
 
 

 

 
 

 
 

 


 


 
 

 
 
 


 








Original	Recharge	Original	Recharge
 Power	 Power	 0	 0
 Mute	 Mute	 -/--	 Guide
 Up	 Up	 -/--/EXIT	 Exit
 Down	 Down	 P<P/SWAP	 Pre Ch
 Right	 Right	 Vol+	 Vol +
 Left	 Left	 Vol-	 Vol -
 OK/Select	 OK	 P+	 Ch +
 M	 Menu	 P-	 Ch -
 1	 1	 PP	 Eject
 2	 2	 I-II	 Dual
 3	 3	 Tv/DTV	 TV/R
 4	 4	 [≡]	 Text
 5	 5	 [≡0]	 Options
 6	 6	 AV/Source	 AV
 7	 7	 [≡+]/[X]	 Format
 8	 8	 [≡X]/[RGB]	 3D
 9	 9	 [.≡]/[]	 Subt





Original	Recharge
[≡◆]	APP MEDIA Media
[≡?]	RETURN BACK Back
[≡i]	DISPLAY INFO Info
Red/[+]/Wide/↑	A Red
Green/↓	B Green
Yellow	C Yellow
Blue/Guide	D Blue
[i]	E-MANUAL D.MENU D. Menu

Original	Recharge

