






Original	Recharge
 Mute	 Mute / Dimmer
 TV/SAT	 AV / Input / RDS
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Sat List	 Smart / List
 0	 0
 TV/R	 TV/Radio /
 CH-PG+	 CH+ / Page+
 EPG	 Guide / EPG / -/-

Original	Recharge
 Vol+	 Vol+
 CH/PG-	 CH- / Page-
 FAV	 Fav / Marker / PC
 Vol-	 Vol-
 Info	 Info / Angle
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red / Audio	 Red / Netflix / Search
 Red / Audio	 Audio / Lang I/II
 Green / Subt	 Green / APP / Repeat
 Green / Subt	 Subtitle / EQ





**Original**

**Rechange**

TEXT 	Yellow / Text	GOTO TEXT	Text / Goto
TEXT 	Yellow / Text	YouTube REPEAT A-B	Yellow / YouTube / Repeat
SLEEP 	Blue / Sleep	Prime Video RANDOM	Blue / Prime Video / Random
SLEEP 	Blue / Sleep	TIMER SLEEP	Sleep / Timer
OPTION 	Option 1	TOP MENU D.MENU	D.Menu / Top
OPTION 	Option 2	OPT-TOOLS SETUP	Setup / OPT /
PAL/NTSC 	Pal / NTSC	FORMAT PICTURE	Picture / Format
PAUSE 	Pause	HOLD 	Stop / Hold
PAUSE 	Freeze	STEP - FREEZE 	Pause / Step / Freeze
ZOOM 	Zoom	SIZE ZOOM	Zoom / Size

**Original**

**Rechange**