



 




 
 





 

 





Original	Recharge
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
--	--
	Menu [M]
	Info [i]
	I-II

Original	Recharge
	Mute
	Left
	Up
	Right
	OK
	Down
	V -
	V +
	P -
	P +
	Red / Sound
	Green / Picture
	Yellow / Feature
	Blue / Install
	Text





	Original	Recharge	
	[≡o]	Sleep / Timer	
	Hold	Stop / Hold	
	[≡X]	Exit / Cancel / Clear	
	Mix / PIP Swap	Smart / List	
	PIP / Size	Zoom / Size	
	PIP Down / [≡?]	I<< / Preset-	
	PIP Up / Index	>>I / Preset+	
	[TV]	TV/Radio /	
	[AV]	AV / Input / RDS	

	Original	Recharge

