






 


 




















 


 
 

 


 


 


 
 

 





	Original	Rechange	Original	Rechange
	Standby			TV/R
	Menu			Stop
	Title			Pause
	Setup			Text
	Up			Shift + Eject
	Down			Eject
	Right			Shift + Play
	Left			Vol +
	>>			Vol -
	<<			1
	>>			2
	<<			3
	Subtitle			4
	Angle			5
	Audio			6
	Play			7
	Display			8





	Original	Rechange	Original	Rechange
	9	9		
	0	0		

