
















 

 
 



 



 













 














 













| Original | Recharge |
|---|--|
|  Power |  Power |
|  SD/HC |  Shift + Display / Media |
|  Input TV |  Shift + AV / Input / RDS |
|  Input AV |  AV / Input / RDS |
|  Aspect |  Picture / Format |
|  Menu |  Menu / Home |
|  N |  Shift + Up |
|  Direct Tv Rec |  D.Menu / Top |
|  i |  Info / Angle |
|  Exit |  Exit / Cancel / Clear |
|  Viera Tools |  Smart / List |
|  Viera Link |  Display / Media |
|  Up |  Up |
|  Guide |  Guide / EPG / -/-- |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |

| Original | Recharge |
|--|---|
|  Option |  Setup / OPT / |
|  Down |  Down |
|  Return |  Back / Return |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Text |  Text / Goto |
|  [≡♦]/Sttl |  Subtitle / EQ |
|  [≡i]/Index |  Shift + Info / Angle |
|  [≡+]/Hold |  Shift + Stop / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |





| Original | Recharge |
|--|--|
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Mute |  Mute / Dimmer |
|  0 |  0 |
|  OIO |  Shift + Smart / List |
|  Vol+ |  Vol+ |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  CH- |  CH- / Page- |
|  Power Down |  Shift + Power |
|  Programme |  Shift + CH- / |
|  Programme Up |  Shift + CH+ / |
|  <</ << |  << / Tune- |
|  Play |  Play / Slow |
|  >>/>> |  >> / Tune+ |
|  Stop |  Stop / Hold |

| Original | Recharge |
|--|---|
|  Pause/Step |  Pause / Step / Freeze |
|  Rec |  Rec / Rec Mode |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

