














 





 



 







 




 



























Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 D.Menu / Top
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Rechange
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 MTS	 Info / Angle
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode





	Original	Recharge	Original	Recharge
	Freeze	Pause / Step / Freeze		Green / APP / Repeat
	Guide	Guide / EPG / -/-		Yellow / YouTube / Repeat
	<<	<< / Tune-		Blue / Prime Video / Random
	>> / Aspect	>> / Tune+		
	>> / Aspect	Shift + Picture / Format		
	I<< / Cancel	I<< / Preset-		
	I<< / Cancel	Shift + Exit / Cancel / Clear		
	>>I / Sub.PG	>>I / Preset+		
	Stop / Index	Stop / Hold		
	Play/Pause / Timeshift	Play / Slow		
	Tv/Radio	TV/Radio /		
	Subtitle	Subtitle / EQ		
	Reveal	Eject / Surround		
	Size	Zoom / Size		
	Hold	Shift + Stop /		
	Text	Text / Goto		
	Red	Red / Netflix / Search		





Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Display		Display / Media
	8		8		Vol+		Vol+
	9		9		Vol-		Vol-
	0		0		MTS		Info / Angle
	DTV/ATV		D.Menu / Top		Rec List		Smart / List
	Recall		Back / Return		CH+		CH+ / Page+
	P.Mode		Picture / Format		CH-		CH- / Page-
	S.Mode		Sound / Title		FAV/List		Fav / Marker / PC
	Sleep		Sleep / Timer		Rec		Rec / Rec Mode





	Original	Recharge	Original	Recharge
	Freeze	 Pause / Step / Freeze		Green / APP / Repeat
	Guide	 Guide / EPG / --		Yellow / YouTube / Repeat
	<<	 << / Tune-		Blue / Prime Video / Random
	>> / Aspect	 >> / Tune+		
	>> / Aspect	 Shift + Picture / Format		
	I<< / Cancel	 I<< / Preset-		
	I<< / Cancel	 Shift + Exit / Cancel / Clear		
	>>I / Sub.PG	 >>I / Preset+		
	Stop / Index	 Stop / Hold		
	Play/Pause / Timeshift	 Play / Slow		
	Tv/Radio	 TV/Radio /		
	Subtitle	 Subtitle / EQ		
	Reveal	 Eject / Surround		
	Size	 Zoom / Size		
	Hold	 Shift + Stop /		
	Text	 Text / Goto		
	Red	 Red / Netflix / Search		

