









 

 

 







 

 







 



 

 

 







 

 





 



 



 











Original	Rechange	Original	Rechange
 Power	 Power	 --	 Guide / EPG / -/--
 Up / P+	 Up	 0	 0
 Up / P+	 CH+ / Page+	 P < P	 Fav / Marker / PC
 Menu	 Menu / Home	 PP	 Back / Return
 Left	 Left	 Vol+	 Vol+
 Right	 Right	 I-II	 Audio / Lang I/II
 Down / P-	 Down	 Mute	 Mute / Dimmer
 Down / P-	 CH- / Page-	 Vol-	 Vol-
 1	 1	 Info	 Info / Angle
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 [TV]	 Shift + 1
 7	 7	 [TV]	 TV/Radio /
 8	 8	 [AV]	 AV / Input / RDS
 9	 9	 [≡]	 Text / Goto















 





 
 






 
 
 

 



 



 

 



 







 

 




 
 



 





Original	Rechange
 [≡⊕]	 Subtitle / EQ
 [/ ≡]	 Picture / Format
 [≡X]	 Exit / Cancel / Clear
 [≡↓]	 Zoom / Size
 [≡?]	 Display / Media
 [≡i]	 Smart / List

Original	Rechange





Original		Rechange		Original		Rechange	
	Power		Power		9		9
	Up / P+		Up		+10		Guide / EPG / -/-
	Up / P+		CH+ / Page+		0		0
	Menu		Menu / Home		Repeat		Green / APP / Repeat
	Left		Left		Search		Red / Netflix / Search
	Select		OK		A to B		Yellow / YouTube / Repeat
	Right		Right		Display		Display / Media
	Down / P-		CH- / Page-		Audio		Audio / Lang I/II
	Down / P-		Down		Subtitle		Subtitle / EQ
	1		1		Zoom		Zoom / Size
	2		2		Prog		TV/Radio /
	3		3		C		Blue / Prime Video / Random
	4		4		Angle		Info / Angle
	5		5		Return		Back / Return
	6		6		Time		Sleep / Timer
	7		7		<<		<< / Tune-
	8		8		>>		>> / Tune+







































Original	Rechange	Original	Rechange
	⏮		⏮ / Preset-
	⏭		⏭ / Preset+
	▶/⏸		▶ / Slow
	⏸		⏸ / Step / Freeze
	■		■ / Stop / Hold
	Title		🔊 / Sound / Title
	Open / Close		🔊 / Surround / Eject / Surround

Original	Rechange





Original	Recharge	
On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Tone+		>> / Tune+
Lang		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

Original	Recharge	
Menu Right		Right
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





Original		Rechange
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Lang		Shift + Audio / Lang I/II

Original		Rechange

