 






 



 
 





 

 
 
 

 



 


 



 

 

 
 











 

 

 
 
 

 








| Original | Rechange | Original | Rechange |
|---|--|---|---|
|  Power |  Power |  Tv Menu |  Menu |
|  Mute |  Mute |  -/-- |  Shift + Guide |
|  1 |  1 |  Guide |  Guide |
|  2 |  2 |  Source |  AV |
|  3 |  3 |  Enter |  Ok |
|  4 |  4 |  Up |  Up |
|  5 |  5 |  Down |  Down |
|  6 |  6 |  Right |  Right |
|  7 |  7 |  Left |  Left |
|  8 |  8 |  CH- |  Ch - |
|  9 |  9 |  CH+ |  Ch + |
|  0 |  0 |  Vol- |  Vol - |
|  Recall |  Pre Ch |  Vol+ |  Vol + |
|  Audio/Nicam |  Dual |  Text |  Text |
|  Display |  Shift + Info |  << |  << |
|  Exit |  Exit |  >> |  >> |
|  Auto |  Smart |  Hold |  Options |



