













 







 





 

 

 



 



 



 







 



















Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Nicam/A2		Shift + Audio / Lang I/II		1		1
	Sleep		Sleep / Timer		2		2
	Aspect		Zoom / Size		3		3
	USB/CR		Shift + 8		4		4
	Display		Display / Media		5		5
	Auto		Smart / List		6		6
	PMode		Picture / Format		7		7
	SMode		Sound / Title		8		8
	DTV		D.Menu / Top		9		9
	Source		AV / Input / RDS		0		0
	Up		Up		-/-		Guide / EPG / -/-
	Left		Left		Back		Back / Return
	Enter		OK		CH+		CH+ / Page+
	Right		Right		Info		Info / Angle
	Down		Down		Audio		Audio / Lang I/II





Original		Recharge		Original		Recharge	
	Vol+		Vol+		Yellow		Yellow / YouTube / Repeat
	CH-		CH- / Page-		Cyan		Blue / Prime Video / Random
	FAV		Fav / Marker / PC				
	Tv/Radio		TV/Radio /				
	Vol-		Vol-				
	Text		Text / Goto				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop/EPG		Stop / Hold				
	Subtitle		Subtitle / EQ				
	Rec/Hold		Rec / Rec Mode				
	<</Index		<< / Tune-				
	>>/Size		>> / Tune+				
	I<</Reveal		I<< / Preset-				
	>>I/Sbpage		>>I / Preset+				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				

