



| Original | | Rechange | | Original | | Rechange | |
|----------|------------|----------|-----------------------|----------|----------|----------|-----------------------|
| | Power | | Power | | Prog | | TV/Radio / |
| | Open/Close | | Eject / Surround | | Setup | | Setup / OPT / |
| | 1 | | 1 | | Up | | Up |
| | 2 | | 2 | | DVD/USB | | AV / Input / RDS |
| | 3 | | 3 | | DVD/USB | | Shift + 2 |
| | Subtitle | | Subtitle / EQ | | DVD/USB | | Shift + 8 |
| | 4 | | 4 | | Left | | Left |
| | 5 | | 5 | | Enter | | OK |
| | 6 | | 6 | | Right | | Right |
| | Language | | Audio / Lang I/II | | Menu | | Menu / Home |
| | 7 | | 7 | | Down | | Down |
| | 8 | | 8 | | Mute | | Mute / Dimmer |
| | 9 | | 9 | | <</Rev | | << / Tune- |
| | OSD | | Display / Media | | Stop | | Stop / Hold |
| | 0/10 | | 0 | | Play | | Play / Slow |
| | 10+ | | Guide / EPG / -/-- | | Pause | | Pause / Step / Freeze |
| | Clear | | Exit / Cancel / Clear | | I<</Prev | | I<< / Preset- |



