



Original		Rechange		Original		Rechange	
	Power		Power		Prog		TV/Radio /
	Open/Close		Eject / Surround		Setup		Setup / OPT /
	1		1		Up		Up
	2		2		DVD/USB		AV / Input / RDS
	3		3		DVD/USB		Shift + 2
	Subtitle		Subtitle / EQ		DVD/USB		Shift + 8
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	Language		Audio / Lang I/II		Menu		Menu / Home
	7		7		Down		Down
	8		8		Mute		Mute / Dimmer
	9		9		<</Rev		<< / Tune-
	OSD		Display / Media		Stop		Stop / Hold
	0/10		0		Play		Play / Slow
	10+		Guide / EPG / -/--		Pause		Pause / Step / Freeze
	Clear		Exit / Cancel / Clear		I<</Prev		I<< / Preset-





Original	Recharge	Original	Recharge
Search	Red / Netflix / Search	Remain	D.Menu / Top
Repeat	Green / APP / Repeat		
>>/Fwd	>> / Tune+		
>>I/Next	>>I / Preset+		
Vol-	Vol-		
Vol+	Vol+		
Title	Sound / Title		
Return	Back / Return		
V-Mode	Picture / Format		
Slow	+ Shift + Play /		
A-B	Yellow / YouTube / Repeat		
RAN	Text / Goto		
N/P	CH+ / Page+		
L/R	CH- / Page-		
Angle	Info / Angle		
Zoom	Zoom / Size		
Resume	Smart / List		

