




 

 

 



 

 



 

 

 

 

 

 

 












Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Nicam	 Options

Original	Rechange
 Sleep	 Sleep
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Info	 Info
 Media	 Media
 Freeze	 Smart
 Aspect	 3D
 EPG	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu





Original	Recharge	Original	Recharge
 Exit	 Exit	 Green	 Green
 Text	 Text	 Yellow	 Yellow
 Play	 Play	 Blue	 Blue
 Pause	 Pause		
 Stop/Hold	 Stop		
 <<	 <<		
 Size	 Format		
 >>/Reveal	 >>		
 I<</Index	 I<<		
 >>I/Subpage	 >>I		
 Lang	 Dual		
 Subtitle	 Subt		
 Rec	 Rec		
 R.List	 List		
 TV/Radio	 TV/R		
 Timeshift	 Back		
 Red	 Red		

Original	Recharge	Original	Recharge
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

