

 

 


 


 

 

 
 
 

 

 
 
 
 

 


 








 
 


 

 
 

 
 
 
 
 

 
 
 

 
 

 
 




	Original	Recharge	Original	Recharge
	Power			Angle/TTX
	Goto			Audio
	Mute			PBC/Scan
	Source			Title
	1			Stop
	2			Play
	3			Pause
	4			Mode
	5			Setup
	6			Up
	7			Down
	8			Right
	9			Left
	0			Enter
	10+			Yellow/Zoom
	Step			Red/Menu
	Subtitle			Green
				Text
				Dual
				Media
				3D
				Play
				Format
				Options
				Up
				Down
				Right
				Left
				Ok
				Yellow
				Red
				Green





Original	Rechange	Original	Rechange
	Blue		Blue
	I<<		I<<
	>>I		>>I
	TV/Radio		TV/R
	Repeat/Del	 + 	Shift + Text
	Pro/EPG		Guide
	Display		Info
	<</FAV		<<
	>>/Prot		>>

Original	Rechange

