








































| Original | Rechange |
|--|--|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  Function |  D.Menu / Top |
|  TFT Mode |  Display / Media |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  CH+ |  CH+ / Page+ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  CH- |  CH- / Page- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  --/10+ |  Guide / EPG / -- |
|  Mute |  Mute / Dimmer |

| Original | Rechange |
|--|---|
|  PBC/Menu |  Menu / Home |
|  Clear |  Exit / Cancel / Clear |
|  0 |  0 |
|  Setup |  Setup / OPT / |
|  Up |  Up |
|  Search |  Red / Netflix / Search |
|  Vol+ |  Vol+ |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Vol- |  Vol- |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Down |  Down |
|  Stop |  Stop / Hold |
|  Audio |  Audio / Lang I/II |
|  I<< |  I<< / Preset- |



