

 





 





















 







Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Stop	 Stop / Hold
 I/II	 Audio / Lang I/II
 [ * ]	 Subtitle / EQ
 16:9	 Picture / Format
 Timer	 Sleep / Timer
 TV	 TV/Radio /
 [ ]	 Setup / OPT /
 TXT	 Text / Goto
 AV	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Index	 Info / Angle
 Left	 Left
 Exit	 Exit / Cancel / Clear
 Down	 Down

Original	Recharge
 Vol+	 Vol+
 Mix	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 <>	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ?	 Fav / Marker / PC





Original	Recharge
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Shift + Vol+
 ↑ ↓	 Shift + Smart / List

Original	Recharge

