






 






 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 EPG	 Guide / EPG / -/--
 Settings	 Setup / OPT /
 Up	 Up
 Input	 AV / Input / RDS

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 List	 Smart / List
 Down	 Down
 Back	 Back / Return
 NETFLIX	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Google Play	 Shift + Green / APP /
 Vol+	 Vol+
 Google Assistant	 Display / Media
 P+	 CH+ / Page+
 Vol-	 Vol-
 Home	 Menu / Home
 P-	 CH- / Page-
 Text	 Text / Goto



