



Original		Rechange		Original		Rechange	
	Power		Power		Sleep		Sleep / Timer
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		CH +		CH+ / Page+
	2		2		Vol +		Vol+
	3		3		Info		Info / Angle
	4		4		CH -		CH- / Page-
	5		5		Vol -		Vol-
	6		6		Home		Shift + Menu /
	7		7		FAV		Fav / Marker / PC
	8		8		Settings		Setup / OPT /
	9		9		ASP		Smart / List
	TV / Radio		TV/Radio /		Up		Up
	0		0		Left		Left
	Recall / Mouse		Back / Return		OK		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Menu		Menu / Home
	Nicam / A2		Audio / Lang I/II		Down		Down



