 





 
















 

 



















 



 



 







 



 

 






Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Up		Up
	Text / Play/Pause		Play / Slow		Left		Left
	Text / Play/Pause		Pause / Step / Freeze		Enter		OK
	Text / Play/Pause		Text / Goto		Right		Right
	Still / Stop		Stop / Hold		Down		Down
	Radio		TV/Radio /		Info		Info / Angle
	Aspect / Size		Zoom / Size		Exit		Exit / Cancel / Clear
	Red / <<<		<<< / Tune-		Vol +		Vol+
	Red / <<<		Red / Netflix / Search		Index		Display / Media
	Green / >>>		Green / APP / Repeat		CH +		CH+ / Page+
	Green / >>>		>>> / Tune+		Vol -		Vol-
	Yellow / I<<<		Yellow / YouTube / Repeat		List		Smart / List
	Yellow / I<<<		I<<< / Preset-		CH -		CH- / Page-
	Blue / >>>I		>>>I / Preset+		1		1
	Blue / >>>I		Blue / Prime Video / Random		2		2
	Source		AV / Input / RDS		3		3





Original		Rechange		Original	Rechange
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Audio / I/II		Audio / Lang I/II		
	0		0		
	DVB		D.Menu / Top		
	FAV		Fav / Marker / PC		
	Sleep		Sleep / Timer		
	EPG		Guide / EPG / -/--		
	Prev. CH.		Back / Return		
	Cancel		Shift + Exit / Cancel / Clear		
	Subtitle		Subtitle / EQ		
	USB		Shift + 8		
	Rec		Rec / Rec Mode		

