

 



 



 




 


 
 









 












 




 

 

 

 




 


 



 

 






Original		Recharge		Original		Recharge	
	Power		Power		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	Sleep		Sleep		Left		Left
	Nicam/A2		Dual		Enter		Ok
	Still		Pause		1		1
	16:9		Format		2		2
	NR.		Options		3		3
	Surround		List		4		4
	Picture	 + 	Shift + Format		5		5
	Tv/Av		AV		6		6
	Display		Info		7		7
	Sound	 + 	Shift + Dual		8		8
	Up		Up		9		9
	CH+		Ch +		0		0
	CH-		Ch -		-/--		Guide
	Down		Down		Recall		Pre Ch
	Right		Right		Red		Red



