




Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		MTS I/II		Audio / Lang I/II
	1		1		CH+		CH+ / Page+
	2		2		Vol-		Vol-
	3		3		Sub-T		Subtitle / EQ
	4		4		CH-		CH- / Page-
	5		5		Aspect		Shift + Picture / Format
	6		6		Freeze		Shift + Pause / Step
	7		7		Sleep		Sleep / Timer
	8		8		Source		AV / Input / RDS
	9		9		Up		Up
	-/--		Shift + Guide / EPG / -/--		Display		Display / Media
	0		0		Left		Left
	Recall		Back / Return		OK		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Menu		Menu / Home
	FAV		Fav / Marker / PC		Down		Down





Original		Rechange		Original		Rechange	
	Exit		Exit / Cancel / Clear		List		Smart / List
	Red		Red / Netflix / Search		T.Shift		TV/Radio /
	Green		Green / APP / Repeat		USB		Shift + 8
	Yellow		Yellow / YouTube / Repeat		EPG		Guide / EPG / -/--
	Blue		Blue / Prime Video / Random				
	<< / Text/CC		<< / Tune-				
	<< / Text/CC		Text / Goto				
	Play/Pause /		Play / Slow				
	Play/Pause /		Pause / Step / Freeze				
	>> / Reveal		>> / Tune+				
	<< / Hold		<< / Preset-				
	<< / Hold		Shift + Stop /				
	>>  / Size		>>  / Preset+				
	>>  / Size		Zoom / Size				
	Stop / Index		Stop / Hold				
	Root		Info / Angle				
	Repeat		Shift + Green / APP / Repeat				

