


 







 




 







 

 

 
 
 


 
 

 
 



 
 



 
 

 



 



 














Original		Recharge		Original		Recharge	
	Power		Power		Up / P+		Up
	Mute		Mute		Up / P+		Ch +
	1		1		Audio		Dual
	02		2		Left / Vol-		Left
	3		3		Left / Vol-		Vol -
	4		4		Right / Vol+		Right
	5		5		Right / Vol+		Vol +
	6		6		Down / P-		Down
	7		7		Down / P-		Ch -
	8		8		Text		Text
	9		9		Input		AV
	i		Info		Red		Red
	0		0		Green		Green
	R		Back		Yellow		Yellow
	TV		Media		Blue		Blue
	Sleep		Sleep		Text Cancel		Stop
	TV		Smart		Text Reveal		Play





	Original	Recharge	Original	Recharge
	Text Timer	 >>		
	Text Up	 >>I		
	Text Index	 <<		
	Text Size	 REC MODE		
	Text Hold			
	Text Down	 I<<		

