





Original	Rechange
POWER	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
SUBPAGE	Guide / EPG / -/--
I/II	Audio / Lang I/II
SWAP / RED	Back / Return
SWAP / RED	Red / Netflix / Search
AV	AV / Input / RDS
FREEZE	Pause / Step / Freeze

Original	Rechange
GAME / BLUE	Blue / Prime Video / Random
SLEEP / GREEN	Green / APP / Repeat
SLEEP / GREEN	Sleep / Timer
STATUS /	Yellow / YouTube / Repeat
PP/CANCEL	Exit / Cancel / Clear
P.S	Display / Media
MUTE	Mute / Dimmer
UP	Up
CH+	CH+ / Page+
TV/TEXT	Text / Goto
LEFT	Left
VOL-	Vol-
MENU	Menu / Home
RIGHT	Right
VOL+	Vol+
DOWN	Down
CH-	CH- / Page-





Original		Rechange		Original		Rechange	
	INDEX		Info / Angle				
	T.MODE		Setup / OPT /				
	ZOOM/SIZE		Zoom / Size				
	HOLD		Stop / Hold				
	REVEAL		Play / Slow				
	MIX		Shift +		Text /		
	OK		OK				
	T.BRI		Smart / List				
	PIP/POP		Picture / Format				
	MP/SP		Sound / Title				

