



 








 


 

 
 

 

 


 
 
 



 



 



 



 
 
 

 
 


 
 


 


 

 
 

 











 


 
 




Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 [≡i]/Info	 Info	 Down	 Down
 Mute	 Mute	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 Index	 Media
 4	 4	 List	 List
 5	 5	 CH+	 Ch +
 6	 6	 CH-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 ♥	 Pre Ch
 0	 0	 Sleep	 Sleep
 [≡?]/Source	 AV	 EPG	 Guide
 (O/I/II/Audio	 Dual	 Recall	 Back
 Menu	 Menu	 Red	 Red
 Exit	 Exit	 <<	 <<

Original	Rechange	Original	Rechange
 MUTE	 SHIFT	 TV	 DVD
 INFO	 SAT	 AUX	 REC MODE
 MUTE	 PLAY MODE	 Play	 Pause
 1	 Stop	 Fast Rewind	 Fast Forward
 2	 SOUND	 Left	 Right
 3	 AD	 LIST	 SETTINGS
 4	 SUBT	 DUAL	 OPT
 5	 PICTURE	 SEARCH	 ECO
 6	 FORMAT	 TV/R	 3D
 7	 TIMER	 SLEEP	 AV
 8	 E-MANUAL	 REPEAT	 D.MENU
 9	 ZOOM	 TEXT	 UP
 0	 D.MENU	 TOP MENU	 DISPLAY INFO
 SOURCE	 MENU	 OK	 EXIT
 AUDIO	 CLEAR	 CH+	 RETURN BACK
 MENU	 EXIT	 HOME	 SMART
 EXIT	 APP MEDIA	 APP	 MEDIA
	 CH-	 VOL+	 CH-
	 VOL-	 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	7
		7	8
		8	9
		9	0
		0	FAV
		 GUIDE	PRE-CH
		 A	PRE-CH
		 B	 A
		 C	 B
		 D	 C
		 Red	 D
		 <<	 <<





	Original	Rechange	Original	Rechange
	>>		>>	
	Green		Green	
	Yellow		Yellow	
	<<		<<	
	>>		>>	
	Blue		Blue	
	[≡]		Text	
	Play		Play	
	Pause		Pause	
	Stop/Still		Stop	
	[≡+]		Format	
	Radio		TV/R	
	[≡◆]/[+]		3D	
	[≡x]		Options	
	[≡O]/Subtitle		Subt	
	DMP		Smart	
	Rec		Rec	

