



Original	Rechange	Original	Rechange
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK/List	 Ok
 5	 5	 PR+	 Ch +
 6	 6	 PR-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 ↑	 Smart
 0	 0	 ↓	 Media
 Tv/Radio	 TV/R	 Red	 Red
 ←PR	 Back	 Green	 Green
 EPG	 Guide	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 Info	 Info	 Lang	 Dual





Original		Recharge		Original		Recharge	
	TXT		Text				
	[...]		Subt				
	Audio L/R		Options				
	[+]		3D				
	FAV		Pre Ch				
	UHF		D. Menu				
	Tv/AV		AV				
	PAL/NTSC		Format				
	Record		Rec				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	< Seek		I<<				
	Seek >		>>I				

