

 

 
 
 
 


 



 



 











 



 





 


 
 



 


 
 


 
 

 
 
 
 
 
 


 

 









Original		Rechange		Original		Rechange	
	Power		Power		Back		Back
	[≡i]/Info		Info		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		CH+		Ch +
	8		8		CH-		Ch -
	9		9		List		List
	0		0		Sleep		Sleep
	[≡?]/Source		AV		EPG		Guide
	OOI/II/Audio		Dual		♥/FAV		Pre Ch
	Menu		Menu		Red		Red
	[≡♦]/[++]		3D		Green		Green





Original		Rechange		Original	Rechange
	Yellow		Yellow		
	Blue		Blue		
	<<		<<		
	>>		>>		
	I<<		I<<		
	>>I		>>I		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	[≡]		Text		
	Time Shift		Media		
	[≡o]		Format		
	Radio		TV/R		
	[≡x]		Subt		
	DMP		Options		
	Index		Smart		
	Rec		Rec		

