





Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / Radio	 TV/Radio /
 0	 0
 ←PR	 Back / Return
 EPG	 Guide / EPG / -/--
 Up / PR+	 Up
 Up / PR+	 Shift + Up

Original	Recharge
 Menu	 Menu / Home
 Left / Vol-	 Shift + Left
 Left / Vol-	 Left
 OK / List	 OK
 OK / List	 Shift + OK
 Right / Vol+	 Shift + Right
 Right / Vol+	 Right
 Info	 Info / Angle
 Down / PR-	 Shift + Down
 Down / PR-	 Down
 Exit	 Exit / Cancel / Clear
 Red / Audio	 Shift + Red / Netflix /
 Red / Audio	 Red / Netflix / Search
 Page+	 CH+ / Page+
 Yellow / Subtitle	 Shift + Yellow / YouTube /
 Yellow / Subtitle	 Yellow / YouTube / Repeat
 Page-	 CH- / Page-





Original	Recharge
 Green / TXT	 +  Shift + Green / APP / REPEAT
 Green / TXT	 Green / APP / Repeat
 Pause	 Pause / Step / Freeze
 Blue / L/R	 Blue / Prime Video / Random
 ::	 Text / Goto
 FAV	 Fav / Marker / PC
 UHF	 Setup / OPT /
 PAL / NTSC	 D.Menu / Top
 Record	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold
 TV / AV	 AV / Input / RDS
 <<	 << / Tune-
 >>	 >> / Tune+
 < Seek	 +  Shift + << /
 Seek >	 +  Shift + >> /

Original	Recharge

