








 

 







 
 
 




Original	Recharge
 Power	 Power
 V-Format	 Format
 Mute	 Mute
 F1	 Shift + 1
 F2	 Shift + 2
 TV/AV	 AV
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Recharge
 Fav	 Pre Ch
 Pause	 Pause
 Page+	 Shift + Ch +
 Page-	 Shift + Ch -
 ←PR	 Back
 PR+	 Ch +
 PR+	 Up
 PR-	 Ch -
 PR-	 Down
 Right / Vol+	 Vol +
 Right / Vol+	 Right
 Left / Vol-	 Vol -
 Left / Vol-	 Left
 OK / List	 Ok
 OK / List	 List
 Menu	 Menu
 Exit	 Exit





Original		Rechange		Original		Rechange	
	Info		Info		< Slow		I<<
	EPG		Guide		Slow >		>>I
	Red / Find		Red				
	TV/Radio		TV/R				
	Red / Find	 + 	Shift + TV/R				
	Green / TXT		Green				
	Green / TXT		Text				
	Yellow / Subtitle		Yellow				
	Yellow / Subtitle		Subt				
	Blue / Audio		Blue				
	Blue / Audio		Dual				
	Record		Rec				
	Play		Play				
	Stop		Stop				
	Shift		Smart				
	<< Fast		<<				
	Fast >>		>>				

