

 
 







Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Mute	 Mute	 Left	 Left
 Source	 AV	 Enter	 Ok
 Radio / Angle	 TV/R	 Right	 Right
 List/USB	 List	 Down	 Down
 EPG/+10	 Guide	 CH-	 Ch -
 Still	 Pause	 CH+	 Ch +
 Aspect	 Format	 Vol-	 Vol -
 OO/I/II Audio	 Dual	 Vol+	 Vol +
 FAV+/Prog	 Smart	 Recall	 Back
 FAV-/Repeat	 Media	 Text/Left arrow	 Text
 Info	 Info	 Text/Left arrow	 Left arrow
 Sleep	 Sleep	 Mix/Right arrow	 Shift + Text
 PIC	 Shift + Format	 Mix/Right arrow	 Right arrow
 Sound	 Shift + Dual	 Subtitle	 Subt
 Menu	 Menu	 Index / Play	 Play
 Exit	 Exit	 Hold/Left arrow	 Left arrow





Original		Rechange		Original		Rechange	
	Size/>>I		>>I		Green/Title		Green
	Cancel/Stop		Stop		Yellow/Setup		Yellow
	Reveal/Open/Close/Rec		Rec		Yellow/Setup		Options
	Reveal/Open/Close/Rec		Eject		Blue/D.Menu		Blue
	1		1		Blue/D.Menu		D. Menu
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Page-		Shift + Ch -				
	Page+		Shift + Ch +				
	Red/Goto		Red				

