









































Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CH.List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 PIC.Mode	 Picture / Format
 S.Mode	 Sound / Title

Original	Rechange
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Rec	 Rec / Rec Mode
 Timeshift	 D.Menu / Top
 Timer	 Shift + Sleep / Timer
 Rec.List	 Shift + Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Rechange	Original	Rechange
 Yellow	 Yellow / YouTube / Repeat	 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random	 >>I	 >>I / Preset+
 Aspect	 Shift + Picture / Format	 <<	 << / Tune-
 Tv/Radio	 TV/Radio /	 >>	 >> / Tune+
 Sleep	 Sleep / Timer		
 Subtitle	 Subtitle / EQ		
 Index	 Info / Angle		
 Reveal	 Setup / OPT /		
 Audio	 Audio / Lang I/II		
 Display	 Display / Media		
 Text	 Text / Goto		
 Size	 Zoom / Size		
 Play	 Play / Slow		
 Subpage	 Eject / Surround		
 Pause	 Pause / Step / Freeze		
 Hold	 Shift + Stop /		
 Stop	 Stop / Hold		

