







 


 



 







 




 
 






 











 






	Original	Rechange		Original	Rechange
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Sound
	8		8		Shift + Dual
	9		9		Shift + Format
	0		0		Ch +
	Audio		Dual		Ch -
	Recall		Back		Sleep
	Tv Menu		Menu		Aspect
	Source		AV		Freeze
	ChList		List		Tv/Radio
					Text



