








 









 



 



 



 



 

 



 
 

 






 

 









 




















 
 
 
 


Original	Recharge	Original	Recharge
 Power	 Power	 V-	 Vol -
 Source	 AV	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 [G]	 Guide
 3	 3	 i	 Info
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 OK	 Ok
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 TXT	 Text	 Netflix	 Media
 Lang	 Dual	 YouTube	 Smart
 Mute	 Mute	 Prime Video	 Shift + Smart
 Home	 Menu	 *1	 Format
 V+	 Vol +	 Red	 Red

Original	Recharge	Original	Recharge
 V-	 Vol -	 TV	 MUTE
 P+	 Ch +	 DVD	 SHIFT
 P-	 Ch -	 SAT	 AUX
 [G]	 Guide	 PLAY MODE	 REC MODE
 i	 Info	 Play	 Pause
 Back	 Back	 Stop	 FF
 Exit	 Exit	 Rewind	 Play/Pause
 OK	 Ok	 FR	 Still
 Up	 Up	 DISC NAV	 SOUND
 Down	 Down	 AD	 SETTINGS
 Right	 Right	 LIST	 DUAL
 Left	 Left	 SUBT	 OPT
 Netflix	 Media	 PROG	 SEARCH
 YouTube	 Smart	 PICTURE	 ECO
 Prime Video	 Shift + Smart	 SLEEP	 TV/R
 *1	 Format	 FORMAT	 3D
 Red	 Red	 E-MANUAL	 REPEAT
		 ZOOM	 TIMER
		 D.MENU	 TEXT
		 TOP MENU	 AV
		 MENU	 DISPLAY
		 OK	 INFO
		 Up	
		 Down	
		 Right	
		 Left	
		 VOL+	 HOME
		 SMART	 APP
		 CH-	 MEDIA
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	 7
		 7	 8
		 8	 9
		 9	 0
		 0	 PRE-CH
		A	B
		B	C
		C	D
		D	
		Mandis SHOP	
		www.mandis.tv	





Original		Recharge	
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Original		Recharge	

