









 












 














 


 
 

 
 




 



 



 








 


 




 

 

 

 



 







| Original | | Rechange | | Original | | Rechange | |
|---|--------------|---|-----------------------|---|--------|---|------------------------|
|  | On |  | Power |  | SP A/B |  | Sound / Title |
|  | Standby |  | Shift + Power |  | Up |  | Up |
|  | V1 |  | 1 |  | Muting |  | Mute / Dimmer |
|  | V2 |  | 4 |  | Left |  | Left |
|  | V3 |  | 7 |  | Enter |  | OK |
|  | Multi CH |  | 8 |  | Right |  | Right |
|  | DVD |  | 2 |  | Return |  | Back / Return |
|  | Tape |  | 5 |  | Down |  | Down |
|  | Tuner |  | 6 |  | Setup |  | Setup / OPT / |
|  | CD |  | 3 |  | Pause |  | Pause / Step / Freeze |
|  | Tuner/Dimmer |  | 0 |  | Play |  | Play / Slow |
|  | Tuner/Dimmer |  | Shift + Mute / Dimmer |  | Stop |  | Stop / Hold |
|  | Sleep |  | Sleep / Timer |  | << |  | << / Tune- |
|  | CH/Disc+ |  | CH+ / Page+ |  | >> |  | >> / Tune+ |
|  | Vol+ |  | Vol+ |  | I<< |  | I<< / Preset- |
|  | CH/Disc- |  | CH- / Page- |  | >>I |  | >>I / Preset+ |
|  | Vol- |  | Vol- |  | Stereo |  | Red / Netflix / Search |









 



 












 














 



 







 



 



 








 


| Original | Rechange |
|---|---|
|  Surround |  Eject / Surround |
|  Surround |  Green / APP / Repeat |
|  < |  Yellow / YouTube / Repeat |
|  > |  Blue / Prime Video / Random |
|  Test Tone |  Text / Goto |
|  CH Sel |  Smart / List |
|  Level- |  Shift + CH- / |
|  Level+ |  Shift + CH+ / |
|  Display |  Display / Media |
|  L.Night/HDD |  D.Menu / Top |
|  Cine FLTR/DVD |  Menu / Home |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Rechange |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | | Rechange | | Original | | Rechange | |
|---|----------|---|-----------------------|---|----------------------|---|-----------------------|
|  | On |  | Power |  | Up |  | Up |
|  | Standby |  | Shift + Power |  | Muting/Previous Menu |  | Menu / Home |
|  | 1 |  | 1 |  | Muting/Previous Menu |  | Mute / Dimmer |
|  | 2 |  | 2 |  | Left |  | Left |
|  | 3 |  | 3 |  | Enter |  | OK |
|  | 4 |  | 4 |  | Right |  | Right |
|  | 5 |  | 5 |  | Return |  | Back / Return |
|  | 6 |  | 6 |  | Down |  | Down |
|  | 7 |  | 7 |  | Setup |  | Setup / OPT / |
|  | 8 |  | 8 |  | Pause |  | Pause / Step / Freeze |
|  | 9 |  | 9 |  | Play |  | Play / Slow |
|  | +10 |  | Guide / EPG / -/-- |  | Stop |  | Stop / Hold |
|  | 0 |  | 0 |  | << |  | << / Tune- |
|  | CLR |  | Exit / Cancel / Clear |  | >> |  | >> / Tune+ |
|  | CH/Disc+ |  | CH+ / Page+ |  | I<< |  | I<< / Preset- |
|  | CH/Disc- |  | CH- / Page- |  | >>I |  | >>I / Preset+ |
|  | Top Menu |  | D.Menu / Top |  | Audio |  | Audio / Lang I/II |





| | Original | Rechange | Original | Rechange |
|-----------------|----------|--------------------|----------|-----------------------------|
| SUBTITLE CH SEL | Subtitle | EQ SUBTITLE | | Subtitle / EQ |
| RANDOM LEVEL- | Random | Prime Video RANDOM | | Blue / Prime Video / Random |
| REPEAT LEVEL+ | Repeat | APP REPEAT | | Green / APP / Repeat |
| DISPLAY | Display | MEDIA DISPLAY | | Display / Media |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |





| Original | Rechange |
|--|--|
|  On |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  CH/Disc+ |  CH+ / Page+ |
|  CH/Disc- |  CH- / Page- |
|  Guide |  Guide / EPG / -/-- |
|  Up |  Up |
|  Muting/Previous Menu |  Menu / Home |
|  Muting/Previous Menu |  Mute / Dimmer |

| Original | Rechange |
|--|---|
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Setup |  Setup / OPT / |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  Stop |  Stop / Hold |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  On CD |  Shift + Power |
|  Standby CD |  Shift + Mute / Dimmer |
|  1 CD |  Shift + 1 |
|  2 CD |  Shift + 2 |
|  3 CD |  Shift + 3 |
|  4 CD |  Shift + 4 |
|  5 CD |  Shift + 5 |





| | Original | Rechange | |
|--|--------------|----------|-------------------------------------|
| | 6 CD | + | Shift + 6 |
| | 7 CD | + | Shift + 7 |
| | 8 CD | + | Shift + 8 |
| | 9 CD | + | Shift + 9 |
| | +10 CD | + | Shift + Guide / EPG / -/- |
| | 0 CD | + | Shift + 0 |
| | CLR CD | + | Shift + Exit / Cancel / Clear |
| | CH/Disc + CD | + | Shift + CH+ / |
| | CH/Disc- CD | + | Shift + CH- / |
| | Pause CD | + | Shift + Pause / Step / |
| | Play CD | + | Shift + Play / |
| | Stop CD | + | Shift + Stop / |
| | << CD | + | Shift + << / |
| | >> CD | + | Shift + >> / |
| | I<< CD | + | Shift + I<< / Preset- |
| | >>I CD | + | Shift + >>I / Preset+ |
| | Random CD | + | Shift + Blue / Prime Video / Random |

| | Original | Rechange | |
|--|------------|----------|-------------------------|
| | Repeat CD | + | Shift + Green / APP / |
| | Display CD | + | Shift + Display / Media |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Rechange |
|---|---|
|  On |  Power |
|  Standby |  Shift + Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  CH+ |  CH+ / Page+ |
|  CH- |  CH- / Page- |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |

| Original | Rechange |
|---|---|
|  Right |  Right |
|  Down |  Down |
|  Setup |  Setup / OPT / |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  Stop |  Stop / Hold |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |

