 













 



 






















 



 
 


 



 

 





 










| Original | | Rechange | | Original | | Rechange | |
|---|----------------|--|-----------|---|--------|---|-----------------------|
|  | Power Receiver |  | Power |  | CD |  | Shift + 3 |
|  | 1 |  | 1 |  | D.TUN |  | Smart / List |
|  | VCR / DVR |  | Shift + 4 |  | Dimmer |  | Shift + Mute / Dimmer |
|  | 2 |  | 2 |  | 0 |  | 0 |
|  | CBL / SAT |  | Shift + 0 |  | Sleep |  | Sleep / Timer |
|  | 3 |  | 3 |  | CH+ |  | CH+ / Page+ |
|  | 4 |  | 4 |  | Vol+ |  | Vol+ |
|  | AUX |  | Shift + 7 |  | CH- |  | CH- / Page- |
|  | 5 |  | 5 |  | Vol- |  | Vol- |
|  | Multi CH |  | Shift + 1 |  | SP A/B |  | Info / Angle |
|  | 6 |  | 6 |  | Up |  | Up |
|  | DVD |  | Shift + 2 |  | Muting |  | Mute / Dimmer |
|  | 7 |  | 7 |  | Left |  | Left |
|  | TAPE |  | Shift + 5 |  | Enter |  | OK |
|  | 8 |  | 8 |  | Right |  | Right |
|  | TUNER |  | Shift + 6 |  | Setup |  | Setup / OPT / |
|  | 9 |  | 9 |  | Down |  | Down |



 






















| Original | Recharge |
|-------------------|-----------------------------|
| Return | Back / Return |
| Pause / Play Rev. | Pause / Step / Freeze |
| Play | Play / Slow |
| Stop | Stop / Hold |
| << | << / Tune- |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Stereo | Audio / Lang / I/I |
| Surround | Eject / Surround |
| < Listening Mode | Shift + I<< / Preset- |
| Listening Mode > | Shift + >>I / Preset+ |
| Test Tone | Red / Netflix / Search |
| CH Sel | Green / APP / Repeat |
| Level- | Yellow / YouTube / Repeat |
| Level+ | Blue / Prime Video / Random |
| Display | Display / Media |

| Original | Recharge |
|-----------|--------------|
| L.Night | Menu / Home |
| Cine FLTR | D.Menu / Top |




















| Original | Rechange |
|--|---|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  +10/10/-/- |  Guide / EPG / -/- |
|  0/11 |  0 |
|  CLR/12/Sleep |  Sleep / Timer |
|  CLR/12/Sleep |  Exit / Cancel / Clear |
|  Guide/Top |  D.Menu / Top |
|  Up |  Up |
|  Previous Menu/Muting |  Menu / Home |

| Original | Rechange |
|--|---|
|  Left/Playlist/Cat- |  Left |
|  Enter |  OK |
|  Right/Playlist/Cat |  Right |
|  Setup |  Setup / OPT / |
|  Down |  Down |
|  Return |  Back / Return |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  Stop |  Stop / Hold |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  Stereo |  Sound / Title |
|  Surround |  Eject / Surround |
|  < Listening Mode |  Shift + I<< / Preset- |
|  Listening Mode > |  Shift + >>I / Preset+ |



 



















 











 





 













 



 






| Original | Rechange |
|--|---|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  +10/10/-/- |  Guide / EPG / -/- |
|  0 |  0 |
|  CLR/12/Sleep |  Sleep / Timer |
|  CLR/12/Sleep |  Exit / Cancel / Clear |
|  Disc/Album |  CH+ / Page+ |
|  Vol+ |  Vol+ |
|  Disc/Album CH- |  CH- / Page- |

| Original | Rechange |
|--|---|
|  Vol- |  Vol- |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  Stop |  Stop / Hold |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  Stereo |  Audio / Lang I/II |
|  Surround |  Eject / Surround |
|  < Listening Mode |  Shift + I<< / Preset- |
|  Listening Mode > |  Shift + >>I / Preset+ |
|  Level-/Random |  Blue / Prime Video / Random |
|  Level+/Repeat |  Green / APP / Repeat |
|  Display |  Display / Media |





| Original | Rechange |
|--|---|
|  Standby / On |  Power |
|  VCR/DVR |  4 |
|  CBL/SAT |  0 |
|  AUX |  7 |
|  Multi CH |  1 |
|  DVD |  2 |
|  Tape |  5 |
|  Tuner |  6 |
|  CD |  3 |
|  D.Tun |  Smart / List |
|  Dimmer |  Shift + Dimmer / Mute |
|  CLR / Sleep |  Sleep / Timer |
|  CLR / Sleep |  Exit / Cancel / Clear |
|  CH Disc |  CH+ / Page+ |
|  Vol+ |  Vol+ |
|  CH Disc Album- |  CH- / Page- |
|  Vol- |  Vol- |

| Original | Rechange |
|--|---|
|  Up |  Up |
|  Muting |  Mute / Dimmer |
|  Left/Playlist/Cat- |  Left |
|  Enter |  OK |
|  Right/Playlist/Cat |  Right |
|  Setup |  Setup / OPT / |
|  Down |  Down |
|  Return |  Back / Return |
|  Rev. Play |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  Stop |  Stop / Hold |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  Stereo |  Audio / Lang I/II |
|  Surround |  Eject / Surround |
|  < Listening Mode |  I<< / Preset- |
|  Listening Mode > |  >>I / Preset+ |



