


























 

 



 


 







 


 



















Original	Recharge	Original	Recharge
 On	 Power	 Level Down	 Shift + CH- /
 Standby	 Shift + Power	 Level Up	 Shift + CH+ /
 Return	 Back / Return	 I<<	 I<< / Preset-
 Setup	 Setup / OPT /	 Play	 Play / Slow
 CH+/Disc+	 CH+ / Page+	 >>I	 >>I / Preset+
 Up	 Up	 <<	 << / Tune-
 Vol+	 Vol+	 Stop	 Stop / Hold
 CH-/Disc-	 CH- / Page-	 >>	 >> / Tune+
 Left	 Left	 Rec / Random	 Blue / Prime Video / Random
 Enter	 OK	 Rec / Random	 Rec / Rec Mode
 Right	 Right	 Pause	 Pause / Step / Freeze
 Vol-	 Vol-	 Input Sel. DVD	 2
 Down	 Down	 Input Sel. CD	 3
 Audio Sel	 Audio / Lang I/II	 Input Sel. V1	 1
 CH Sel / Top Menu	 D.Menu / Top	 Input Sel. V2	 4
 Test / Menu	 Menu / Home	 Input Sel. TAP	 5
 Muting	 Mute / Dimmer	 Input Sel. TUN	 6





Original		Recharge		Original		Recharge	
	Input Sel. V3		7				
	Input Sel. V4		8				
	Input Sel. V5		9				
	Input Sel. PH		0				
	Pure A		Shift + 1				
	Direct		Shift + 2				
	Stereo		Shift + 3				
	Surr.		Eject / Surround				
	Surr.		Shift + 4				
	All St.		Shift + 5				
	DSP		Shift + 6				
	SP A		Shift + 7				
	SP B		Shift + 8				
	CINE FLTR		Shift + 9				
	Display		Display / Media				
	Dimmer		Shift + Mute / Dimmer				
	Zone 2		Smart / List				


























 


Original	Rechange
 Sleep	 Sleep / Timer
 On	 Power
 Standby	 Shift + Power
 Return	 Back / Return
 Setup	 Setup / OPT /
 Disc+	 CH+ / Page+
 Vol+	 Vol+
 Disc-	 CH- / Page-
 Vol-	 Vol-
 Audio Sel /	 Audio / Lang I/II
 Audio Sel /	 AV / Input / RDS
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Muting	 Mute / Dimmer
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 I<<	 I<< / Preset-

Original	Rechange
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Eject	 Eject / Surround
 Input Sel. DVD	 Shift + 2
 Input Sel. CD	 Shift + 3
 Input Sel. V1	 Shift + 1
 Input Sel. V2	 Shift + 4
 Input Sel. TAP	 Shift + 5
 Input Sel. TUN	 Shift + 6
 Input Sel. V3	 Shift + 7
 Input Sel. V4	 Shift + 8
 Input Sel. V5	 Shift + 9












	Original	Recharge		Original	Recharge
	 Input Sel. PH	 +  Shift + 0			
	 1	 1			
	 2	 2			
	 3	 3			
	 4	 4			
	 5	 5			
	 6	 6			
	 7	 7			
	 8	 8			
	 9	 9			
	 +10 / -- / ---	 Guide / EPG / /--			
	 0	 0			
	 Search/Enter	 Fav / Marker / PC			
	 Search/Enter	 Red / Netflix / Search			





Original		Rechange		Original		Rechange	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		CH+ / Page+		4		4
	Vol+		Vol+		5		5
	Vol-		Vol-		6		6
	Muting		Mute / Dimmer		7		7
	Subtitle		Subtitle / EQ		8		8
	I<<		I<< / Preset-		9		9
	Play		Play / Slow		+10		Guide / EPG / -/-
	>>I		>>I / Preset+		0		0
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Random		Blue / Prime Video / Random				
	Pause		Pause / Step / Freeze				
	Eject		Eject / Surround				
	1		1				

