



Original	Recharge
 ON	 Power
 Standby	 Shift + Power
 Display	 Display / Media
 BD / DVD	 Shift + 2
 VCR / DVR	 Shift + 4
 CBL / SAT	 Shift + 0
 GAME	 Shift + 5
 PC	 Shift + Fav / Marker / PC
 AUX	 Shift + 7
 TUNER	 Shift + 6
 TV/CD	 Shift + 3
 TV/CD	 Shift + 1
 PHONO	 Shift + Guide / EPG / -/-
 PORT	 Fav / Marker / PC
 NET	 Shift + 9
 USB	 Shift + 8
 Muting	 Mute / Dimmer

Original	Recharge
 CH+	 CH+ / Page+
 Vol+	 Vol+
 CH-	 CH- / Page-
 Vol-	 Vol-
 SP Layout	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Home	 Smart / List
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-





Original	Recharge
Play	Play / Slow
>>	>> / Tune+
Pause / Play Rev.	Pause / Step / Freeze
Stop	Stop / Hold
Movie / TV	Red / Netflix / Search
Music	Green / APP / Repeat
Game	Yellow / YouTube / Repeat
Thx	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Recharge
Dimmer	Shift + Mute / Dimmer
D.TUN	Text / Goto
0	0
Sleep	Sleep / Timer

















































Original	Recharge
 On	 Power
 Standby	 Shift + Power
 Display	 Display / Media
 BD / DVD	 Shift + 2
 VCR / DVR	 Shift + 4
 CBL / SAT	 Shift + 0
 GAME	 Shift + 5
 PC	 Shift + Fav / Marker / PC
 AUX	 Shift + 7
 TUNER	 Shift + 6
 TV/CD	 Shift + 3
 TV/CD	 Shift + 1
 PHONO	 Shift + Guide / EPG / -/-
 PORT	 Fav / Marker / PC
 NET	 Shift + 9
 USB	 Shift + 8
 Muting	 Mute / Dimmer

Original	Recharge
 CH+ / Album+	 CH+ / Page+
 Vol+	 Vol+
 CH- / Album-	 CH- / Page-
 Vol-	 Vol-
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left / Playlist-	 Left
 Enter	 OK
 Right / Playlist+	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Home	 Smart / List
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-





Original	Rechange
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause / Play Rev.	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Search	 Red / Netflix / Search
 Repeat	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Play Mode	 Yellow / YouTube / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Rechange
 --/-- +10	 Guide / EPG / --/--
 0	 0
 Sleep	 Sleep / Timer
 CLR	 Exit / Cancel / Clear












 

 












 








 

 









Original	Recharge
Power	Power
Display	Display / Media
BD / DVD	Shift + 2
VCR / DVR	Shift + 4
CBL / SAT	Shift + 0
GAME	Shift + 5
PC	Shift + Fav / Marker / PC
AUX	Shift + 7
TUNER	Shift + 6
TV / CD	Shift + 3
TV / CD	Shift + 1
PHONO	Shift + Guide / EPG / --
PORT	Fav / Marker / PC
NET	Shift + 9
USB	Shift + 8
Muting	Mute / Dimmer
CH+	CH+ / Page+

Original	Recharge
Vol+	Vol+
CH-	CH- / Page-
Vol-	Vol-
SP Layout	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Home	Shift + Menu /
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
Play	Play / Slow





Original	Rechange
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Movie / TV	 Red / Netflix / Search
 Music	 Green / APP / Repeat
 Game	 Yellow / YouTube / Repeat
 Thx	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Dimmer	 +  Shift + Mute / Dimmer

Original	Rechange
 D.TUN	 Text / Goto
 0	 0
 Sleep	 Sleep / Timer







Original	Recharge
Power	Power
Display	Display / Media
BD / DVD	Shift + 2
VCR / DVR	Shift + 4
CBL / SAT	Shift + 0
GAME	Shift + 5
PC	Shift + Fav / Marker / PC
AUX	Shift + 7
TUNER	Shift + 6
TV / CD	Shift + 3
TV / CD	Shift + 1
PHONO	Shift + Guide / EPG / -/-
PORT	Fav / Marker / PC
NET	Shift + 9
USB	Shift + 8
Muting	Mute / Dimmer
CH+	CH+ / Page+

Original	Recharge
Vol+	Vol+
CH-	CH- / Page-
Vol-	Vol-
SP Layout	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Home	Shift + Menu /
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
Play	Play / Slow



