



 

































 

 





 





 






















 








 






Original	Rechange	Original	Rechange
 On	 Power	 Muting	 Mute / Dimmer
 Standby	 Shift + Power	 Level Down	 CH- / Page-
 Sleep	 Sleep / Timer	 Level Up	 CH+ / Page+
 Return	 Back / Return	 I<<	 I<< / Preset-
 Setup	 Setup / OPT /	 Play	 Play / Slow
 Disc+	 Shift + CH+ /	 >>I	 >>I / Preset+
 Up	 Up	 <<	 << / Tune-
 Vol+	 Vol+	 Stop	 Stop / Hold
 Disc-	 Shift + CH- /	 >>	 >> / Tune+
 Left	 Left	 Rec / Random	 Rec / Rec Mode
 Enter	 OK	 Pause / Play Rev.	 Pause / Step / Freeze
 Right	 Right	 Open / Close	 Shift + Eject / Surround
 Vol-	 Vol-	 Input Sel. DVD	 2
 Down	 Down	 Input Sel. CD	 3
 Audio	 Audio / Lang I/II	 Input Sel. V1	 1
 CH Sel	 Smart / List	 Input Sel. V2	 4
 Test	 Text / Goto	 Input Sel. T1	 5





Original		Rechange	
T2	Input Sel. T2	 8	8
V3	Input Sel. V3	 7	7
V4	Input Sel. V4	 9	9
TUN	Input Sel. TUN	 6	6
PH	Input Sel. PH	 0	0
STEREO 1	Stereo	 SOUND	Sound / Title
DIRECT 2	Direct	 NETFLIX SEARCH	Red / Netflix / Search
DSP 3	DSP ►	 SHIFT + 	Shift + Right
SURR 4	SURR	 SURROUND	Eject / Surround
A.ST 5	A.ST	 APP REPEAT	Green / APP / Repeat
DSP 6	◄ DSP	 SHIFT + 	Shift + Left
SPA 7	SP A	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
SP B 8	SP B	 Prime Video RANDOM	Blue / Prime Video / Random
Re-EQ 9	Re-EQ	 EQ SUBTITLE	Subtitle / EQ
DISPLAY +10	Display	 MEDIA DISPLAY	Display / Media
DIMMER 0	Dimmer	 SHIFT + 	Shift + Mute / Dimmer
ZONE 2 SEARCH/ENTER	Zone 2	 RDS AV INPUT	AV / Input / RDS

Original		Rechange	





Original		Rechange		Original		Rechange	
	ON		Power		Subtitle		Subtitle / EQ
	STDBY		Shift + Power		I<<		I<< / Preset-
	Return		Back / Return		Play		Play / Slow
	Setup		Setup / OPT /		>>I		>>I / Preset+
	Disc+		CH+ / Page+		<<		<< / Tune-
	Up		Up		Stop		Stop / Hold
	Vol+		Vol+		>>		>> / Tune+
	Disc-		CH- / Page-		Random		Blue / Prime Video / Random
	Left		Left		Pause		Pause / Step / Freeze
	Enter		OK		Open / Close		Eject / Surround
	Right		Right		1		1
	Vol-		Vol-		2		2
	Down		Down		3		3
	Top Menu		D.Menu / Top		4		4
	Menu		Menu / Home		5		5
	Muting		Mute / Dimmer		6		6
	Angle		Info / Angle		7		7





	Original	Rechange	Original	Rechange
	8			
	9			
	+10			
	0			
	Search			













 













 

 
 







 










 
 
 
 

 
 





Original		Rechange		Original		Rechange	
	ON		Power		3		3
	STDBY		Shift + Power		4		4
	Disc+		CH+ / Page+		5		5
	Vol+		Vol+		6		6
	Vol-		Vol-		7		7
	Muting		Mute / Dimmer		8		8
	I<<		I<< / Preset-		9		9
	Play		Play / Slow		+10		Guide / EPG / -/-
	>>I		>>I / Preset+		0		0
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Random		Blue / Prime Video / Random				
	Pause		Pause / Step / Freeze				
	Open / Close		Eject / Surround				
	1		1				
	2		2				





Original	Recharge	Original	Recharge
 ON	 Power	 1	 1
 STDBY	 Shift + Power	 2	 2
 Vol+	 Vol+	 3	 3
 Enter	 OK	 4	 4
 Enter	 Fav / Marker / PC	 5	 5
 Vol-	 Vol-	 6	 6
 Muting	 Mute / Dimmer	 7	 7
 I<<	 I<< / Preset-	 8	 8
 Play	 Play / Slow	 9	 9
 >>I	 >>I / Preset+	 +10	 Guide / EPG / -/--
 <<	 << / Tune-	 0	 0
 Stop	 Stop / Hold		
 >>	 >> / Tune+		
 Rec / Random	 Rec / Rec Mode		
 Rec / Random	 Blue / Prime Video / Random		
 Pause	 Pause / Step / Freeze		
 Open / Close	 Eject / Surround		

