



 

































 

 





 





 



















| Original | Rechange | Original | Rechange |
|--|---|--|--|
|  On |  Power |  Muting |  Mute / Dimmer |
|  Standby |  Shift + Power |  Level Down |  CH- / Page- |
|  Sleep |  Sleep / Timer |  Level Up |  CH+ / Page+ |
|  Return |  Back / Return |  I<< |  I<< / Preset- |
|  Setup |  Setup / OPT / |  Play |  Play / Slow |
|  Disc+ |  Shift + CH+ / |  >>I |  >>I / Preset+ |
|  Up |  Up |  << |  << / Tune- |
|  Vol+ |  Vol+ |  Stop |  Stop / Hold |
|  Disc- |  Shift + CH- / |  >> |  >> / Tune+ |
|  Left |  Left |  Rec / Random |  Rec / Rec Mode |
|  Enter |  OK |  Pause / Play Rev. |  Pause / Step / Freeze |
|  Right |  Right |  Open / Close |  Shift + Eject / Surround |
|  Vol- |  Vol- |  Input Sel. DVD |  2 |
|  Down |  Down |  Input Sel. CD |  3 |
|  Audio |  Audio / Lang I/II |  Input Sel. V1 |  1 |
|  CH Sel |  Smart / List |  Input Sel. V2 |  4 |
|  Test |  Text / Goto |  Input Sel. T1 |  5 |





| Original | Rechange |
|----------------|-----------------------------|
| Input Sel. T2 | 8 |
| Input Sel. V3 | 7 |
| Input Sel. V4 | 9 |
| Input Sel. TUN | 6 |
| Input Sel. PH | 0 |
| Stereo | Sound / Title |
| Direct | Red / Netflix / Search |
| DSP ▶ | Shift + Right |
| SURR | Eject / Surround |
| A.ST | Green / APP / Repeat |
| ◀ DSP | Shift + Left |
| SP A | Yellow / YouTube / Repeat |
| SP B | Blue / Prime Video / Random |
| Re-EQ | Subtitle / EQ |
| Display | Display / Media |
| Dimmer | Shift + Mute / Dimmer |
| Zone 2 | AV / Input / RDS |

| Original | Rechange |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Rechange |
|----------|---------------|
| ON | Power |
| STDBY | Shift + Power |
| Return | Back / Return |
| Setup | Setup / OPT / |
| Disc+ | CH+ / Page+ |
| Up | Up |
| Vol+ | Vol+ |
| Disc- | CH- / Page- |
| Left | Left |
| Enter | OK |
| Right | Right |
| Vol- | Vol- |
| Down | Down |
| Top Menu | D.Menu / Top |
| Menu | Menu / Home |
| Muting | Mute / Dimmer |
| Angle | Info / Angle |

| Original | Rechange |
|--------------|-----------------------------|
| Subtitle | Subtitle / EQ |
| I<< | I<< / Preset- |
| Play | Play / Slow |
| >>I | >>I / Preset+ |
| << | << / Tune- |
| Stop | Stop / Hold |
| >> | >> / Tune+ |
| Random | Blue / Prime Video / Random |
| Pause | Pause / Step / Freeze |
| Open / Close | Eject / Surround |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |





| | Original | Rechange | | Original | Rechange |
|---|----------|---|------------------------|----------|----------|
|  | 8 |  | 8 | | |
|  | 9 |  | 9 | | |
|  | +10 |  | Guide / EPG / -/-- | | |
|  | 0 |  | 0 | | |
|  | Search |  | Red / Netflix / Search | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |




 


 


















 

 



| Original | | Rechange | | Original | | Rechange | |
|----------|--------------|----------|-----------------------------|----------|-----|----------|-------------------|
| | ON | | Power | | 3 | | 3 |
| | STDBY | | Shift + Power | | 4 | | 4 |
| | Disc+ | | CH+ / Page+ | | 5 | | 5 |
| | Vol+ | | Vol+ | | 6 | | 6 |
| | Vol- | | Vol- | | 7 | | 7 |
| | Muting | | Mute / Dimmer | | 8 | | 8 |
| | I<< | | I<< / Preset- | | 9 | | 9 |
| | Play | | Play / Slow | | +10 | | Guide / EPG / -/- |
| | >>I | | >>I / Preset+ | | 0 | | 0 |
| | << | | << / Tune- | | | | |
| | Stop | | Stop / Hold | | | | |
| | >> | | >> / Tune+ | | | | |
| | Random | | Blue / Prime Video / Random | | | | |
| | Pause | | Pause / Step / Freeze | | | | |
| | Open / Close | | Eject / Surround | | | | |
| | 1 | | 1 | | | | |
| | 2 | | 2 | | | | |





| Original | Rechange |
|--|---|
|  ON |  Power |
|  STDBY |  Shift + Power |
|  Vol+ |  Vol+ |
|  Enter |  OK |
|  Enter |  Fav / Marker / PC |
|  Vol- |  Vol- |
|  Muting |  Mute / Dimmer |
|  I<< |  I<< / Preset- |
|  Play |  Play / Slow |
|  >>I |  >>I / Preset+ |
|  << |  << / Tune- |
|  Stop |  Stop / Hold |
|  >> |  >> / Tune+ |
|  Rec / Random |  Rec / Rec Mode |
|  Rec / Random |  Blue / Prime Video / Random |
|  Pause |  Pause / Step / Freeze |
|  Open / Close |  Eject / Surround |

| Original | Rechange |
|---|---|
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  +10 |  Guide / EPG / -/- |
|  0 |  0 |

