



Original	Rechange
On / Standby	Power
Input Selector V1	1
Input Selector V2	4
Input Selector V3	7
Dimmer	Shift + Mute / Dimmer
Input Selector Multi CH	8
Return	Back / Return
Setup	Setup / OPT /
Enter	OK
Input Selector	2
Input Selector	5
Sleep	Sleep / Timer
Input Selector Tuner	6
SP A/B	Audio / Lang I/II
Muting	Mute / Dimmer
Up	Up
Down	Down

Original	Rechange
Right	Right
Input Selector CD	3
Left	Left
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
Play Rev.	Pause / Step / Freeze
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Display	Display / Media
Listening Mode Stereo	Sound / Title
Listening Mode Surround	Eject / Surround
Listening Mode <	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+
Test Tone	Text / Goto
Level-	CH- / Page-





Original	Rechange
Vol+	Vol+
CH Sel	Smart / List
Level+	CH+ / Page+
L.Night	TV/Radio /
Cine FLTR	D.Menu / Top
Vol-	Vol-
Input Tv	Shift + AV / Input / RDS
Vol+ Tv	Shift + Vol+
Vol- Tv	Shift + Vol-
CH/Disc/Album	Shift + CH+ /
CH/Disc/Album-	Shift + CH- /
1 Tv	Shift + 1
2 Tv	Shift + 2
Power Tv/Standby	Shift + Power
3 Tv	Shift + 3
4 Tv	Shift + 4
6 Tv	Shift + 6

Original	Rechange
5 Tv	Shift + 5
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
+10 Tv	Shift + Guide / EPG / -/-
Enter Tv	Shift + OK
Right Tv	Shift + Right
Previous Menu Tv	Shift + Fav / Marker / PC
Left Tv	Shift + Left
Setup Tv	Shift + Setup / OPT / Tools
Up Tv	Shift + Up
Down Tv	Shift + Down





Original		Rechange		Original		Rechange	
	Power		Power		Previous Menu/Muting		Mute / Dimmer
	1		1		Left/Playlist/Cat-		Left
	2		2		Enter		OK
	3		3		Right/Playlist/Cat		Right
	4		4		Return		Back / Return
	5		5		Down		Down
	6		6		Setup		Setup / OPT /
	7		7		Pause		Pause / Step / Freeze
	8		8		Play		Play / Slow
	9		9		Stop		Stop / Hold
	VCR		Shift + 4		<<		<< / Tune-
	+10/10/-/-		Guide / EPG / -/-		>>		>> / Tune+
	0/11		0		I<<		I<< / Preset-
	CLR		Exit / Cancel / Clear		>>I		>>I / Preset+
	Top Menu		D.Menu / Top		Stereo		Sound / Title
	Up		Up		Surround		Eject / Surround
	Previous Menu/Muting		Menu / Home		< Listening Mode		Shift + I<< / Preset-







 





 

	Original		Rechange	
	Listening Mode >		+	Shift + >> / Preset+
	Audio		AUDIO	Audio / Lang I/II
	Subtitle		SUBTITLE	Subtitle / EQ
	Random		RANDOM	Blue / Prime Video / Random
	Repeat		REPEAT	Green / APP / Repeat
	Display		DISPLAY	Display / Media
	Play Mode VCR		PICTURE	Picture / Format
	DVD		+	Shift + 2
	HDD		+	Shift + 7

	Original		Rechange





Original	Rechange
 On / Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10/10/-/-	 Guide / EPG / -/-
 0/11	 0
 12	 Fav / Marker / PC
 Disc+	 CH+ / Page+
 Vol+	 Vol+
 Disc-	 CH- / Page-
 Vol-	 Vol-

Original	Rechange
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 Shift + I<< / Preset-
 Listening Mode >	 Shift + >>I / Preset+
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Display	 Display / Media





Original		Rechange	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10/10/--		Guide / EPG / --
	0/11		0
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold

Original		Rechange	
	<<		<< / Tune-
	Stereo		Audio / Lang I/II
	Surround		Eject / Surround
	< Listening Mode	+	Shift + I<< / Preset-
	Listening Mode >	+	Shift + >>I / Preset+
	Play Mode		D.Menu / Top
	L.Night		Sleep / Timer

