



 


 



 






































 




 







 








Original	Recharge	Original	Recharge
 RCVR On	 Power	 RCVR Test / Menu	 Menu
 RCVR Standby	 Shift + Power	 RCVR Audio	 Dual
 RCVR Sleep	 Sleep	 RCVR Level	 Media
 RCVR Return	 Back	 RCVR Level Up	 Smart
 RCVR Setup	 Options	 RCVR I<<	 I<<
 RCVR Disc+	 Ch +	 RCVR Play	 Play
 RCVR Disc-	 Ch -	 RCVR >>I	 >>I
 RCVR Up	 Up	 RCVR <<	 <<
 RCVR Left	 Left	 RCVR Stop	 Stop
 RCVR Enter	 Ok	 RCVR >>	 >>
 RCVR Right	 Right	 RCVR Rec /	 Rec
 RCVR Down	 Down	 RCVR Pause / Play Rev.	 Pause
 RCVR Vol+	 Vol +	 Open / Close	 Eject
 RCVR Vol-	 Vol -	 RCVR Input Sel.	 1
 RCVR Muting	 Mute	 RCVR Input Sel.	 2
 RCVR CH Sel / Top Menu	 Shift + Menu	 RCVR Input Sel.	 3
 RCVR CH Sel / Top Menu	 D. Menu	 RCVR Input Sel.	 4





Original	Rechange
RCVR Input Sel.	5
RCVR Input Sel.	6
RCVR Input Sel.	7
RCVR Input Sel.	8
RCVR Input Sel.	9
RCVR Input Sel.	0
RCVR Stereo	+ Shift + 1
RCVR Direct	+ Shift + 2
RCVR DSP ▶	+ Shift + 3
RCVR SURR	+ Shift + 4
RCVR THX	+ Shift + 5
RCVR ◀ DSP	+ Shift + 6
RCVR SP A	+ Shift + 7
RCVR SP B	+ Shift + 8
RCVR Re-EQ	+ Shift + 9
RCVR Dimmer	+ Shift + 0
RCVR Display	INFO Info

Original	Rechange
RCVR Display	Guide
RCVR Zone 2	Pre Ch





Original	Rechange	Original	Rechange
	ON		Power
	STDBY		Shift + Power
	Return		Back
	Setup		Options
	Disc+		Ch +
	Disc-		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Top Menu		D. Menu
	Menu		Menu
	Angle		Format
			Subtitle
			I<<
			Play
			>>I
			<<
			Stop
			>>
			Random
			Text
			Pause
			Open / Close
			Eject
			1
			2
			3
			4
			5
			6
			7




 



 















 



 

 







 








 









Original		Rechange		Original		Rechange	
	8		8				
	9		9				
	0		0				
	+10		Guide				
	Search		TV/R				






 
 











 

 

 

















 


 







Original		Rechange		Original		Rechange	
	ON		Power		3		3
	STDBY		Shift + Power		4		4
	Disc+		Ch +		5		5
	Vol+		Vol +		6		6
	Vol-		Vol -		7		7
	Muting		Mute		8		8
	I<<		I<<		9		9
	Play		Play		0		0
	>>I		>>I		+10		Guide
	<<		<<				
	Stop		Stop				
	>>		>>				
	Random		Text				
	Pause		Pause				
	Open / Close		Eject				
	1		1				
	2		2				





Original		Rechange		Original		Rechange	
	ON		Power		3		3
	STDBY		Shift + Power		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Muting		Mute		7		7
	I<<		I<<		8		8
	Play		Play		9		9
	>>I		>>I		0		0
	<<		<<		+10		Guide
	Stop		Stop		Enter		Pre Ch
	>>		>>		Enter		Ok
	Rec / Random		Text				
	Rec / Random		Rec				
	Pause		Pause				
	Open / Close		Eject				
	1		1				
	2		2				

