



Original		Rechange		Original		Rechange	
	On / Standby		Power		CH/Disc/Album-		CH- / Page-
	Input Selector V1		1		Vol-		Vol-
	Input Selector V2		4		Guide/Top		Guide / EPG / -/-
	Input Selector V3		7		Guide/Top		D.Menu / Top
	Input Selector Multi CH		8		Up		Up
	Input Selector		2		Muting		Mute / Dimmer
	Input Selector		5		Left		Left
	Input Selector Tuner		6		Enter		OK
	Input Selector CD		3		Right		Right
	Dimmer		Shift + Mute / Dimmer		Return		Back / Return
	Sleep		Sleep / Timer		Down		Down
	Power Tv		Shift + Power		Setup		Setup / OPT /
	Vol+ Tv		Shift + Vol+		Pause		Pause / Step / Freeze
	CH/Disc/Album		CH+ / Page+		Play		Play / Slow
	Vol+		Vol+		Stop		Stop / Hold
	Input Tv		Shift + AV / Input / RDS		<<		<< / Tune-
	Vol- Tv		Shift + Vol-		>>		>> / Tune+







Original	Rechange
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/-/-	Guide / EPG / -/-
0/11	0
CLR	Exit / Cancel / Clear
Top Menu	D.Menu / Top
Up	Up
Previous Menu/Muting	Menu / Home
Previous Menu/Muting	Mute / Dimmer

Original	Rechange
Left/Playlist/Cat-	Left
Enter	OK
Right/Playlist/Cat	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stereo	Shift + Subtitle / EQ
Surround	Shift + Eject / Surround
< Listening Mode	Shift + Sound / Title
Listening Mode >	Shift + Audio / Lang I/II







	Original	Rechange
	On / Standby	 Power
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	+10/10/-/-	 Guide / EPG / -/-
	0/11	 0
	12	 Fav / Marker / PC
	Disc+	 CH+ / Page+
	Vol+	 Vol+
	Disc-	 CH- / Page-
	Vol-	 Vol-

	Original	Rechange
	Pause	 Pause / Step / Freeze
	Play	 Play / Slow
	Stop	 Stop / Hold
	<<	 << / Tune-
	>>	 >> / Tune+
	I<<	 I<< / Preset-
	>>I	 >>I / Preset+
	Stereo	 Subtitle / EQ
	Surround	 Eject / Surround
	< Listening Mode	 Sound / Title
	Listening Mode >	 Audio / Lang I/II
	Random	 Blue / Prime Video / Random
	Repeat	 Green / APP / Repeat
	Display	 Display / Media



