 







 

 






 

 



 





 

 



 

 



Original		Rechange		Original		Rechange	
	On		Power		Up		Up
	Standby		Shift + Power		Vol +		Vol+
	Input Sel. V1		1		CH - / Disc -		CH- / Page-
	Input Sel. V2		4		Left		Left
	Input Sel. V3		7		Enter		OK
	Input Sel. DVD		2		Right		Right
	Input Sel. Multi		8		Vol -		Vol-
	Input Sel. CD		3		Down		Down
	Input Sel. Tape		5		Display		Display / Media
	Input Sel. Tuner		6		Return / Exit		Exit / Cancel / Clear
	Tone		Play / Slow		Return / Exit		Back / Return
	Tone-		<< / Tune-		Setup		Setup / OPT /
	Tone+		>> / Tune+		Muting		Mute / Dimmer
	Dimmer		Shift + Mute / Dimmer		SURR		Eject / Surround
	Menu		Menu / Home		All ST		Subtitle / EQ
	Sleep		Sleep / Timer		Stereo		Audio / Lang I/II
	CH + / Disc +		CH+ / Page+		Pure A		Picture / Format





Original	Rechange
 On	 Power
 Standby	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10 / -- / ---	 Guide / EPG / - / -
 0	 0
 Clear	 Exit / Cancel / Clear
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up

Original	Rechange
 Vol+	 Vol+
 Left	 Left
 Enter	 OK
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 Display	 Display / Media
 Return	 Back / Return
 Setup	 Setup / OPT /
 Muting	 Mute / Dimmer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>	 >> / Tune+

 





 

 

 

 

 



 










 







Original		Rechange		Original		Rechange	
	<		CH- / Page-				
	>		CH+ / Page+				
	Random		Blue / Prime Video / Random				
	Audio		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Angle		Info / Angle				
	Last M		Fav / Marker / PC				
	Repeat		Green / APP / Repeat				
	A-B		Yellow / YouTube / Repeat				
	Search		Red / Netflix / Search				
	Memory		Smart / List				
	Open / Close		Eject / Surround				
	Video Off		AV / Input / RDS				





Original	Rechange
 On	 Power
 Standby	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10 / --/--	 Guide / EPG / --/--
 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 I<<	 I<< / Preset-

Original	Rechange
 Play	 Play / Slow
 >>	 >> / Preset+
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Open / Close	 Eject / Surround

