

 

 

 


| Original | Recharge |
|-----------|------------------|
| Power | Power |
| Switch | Auto |
| [I] | + Shift + Power |
| Freeze | Freeze / Timer |
| Mute | Blank / Mute |
| L | + Shift + Left |
| R | + Shift + Right |
| Up | Up |
| Left | Left |
| Enter | Enter |
| Right | Right |
| Down | Down |
| Page- | - / Stop |
| Mode | Mode |
| Page+ | + / Play |
| Keystone- | + Shift + Down |
| Keystone+ | + Shift + Up |

| Original | Recharge |
|------------|---------------------------|
| Vol- | Vol - / Page - |
| Vol+ | Vol + / Page + |
| [I/I]/1 | Eco / Aspect |
| [I/I]/1 | + Shift + Vol + / Page + |
| Menu/2 | Menu |
| Menu/2 | + Shift + + / Play |
| 3D/3 | 3D / Invert |
| 3D/3 | + Shift + Volt / Focus |
| HDMI/4 | + Shift + Vol - / Page - |
| VGA/5 | + Shift + - / Stop |
| Video/6 | Comp / Video |
| Video/6 | + Shift + Help / Help |
| User1/7 | + Shift + Eco / Aspect |
| User2/8 | + Shift + 3D / |
| User3/9 | + Shift + Blank / Mute |
| Light+/-/0 | + Shift + Source |
| Light+/-/0 | + Shift + Comp / Video |





| Original | | Recharge | | Original | | Recharge | |
|---|---------|---|---|----------|--------------|----------|--|
|  | Source |  | Source | | | | |
|  | Re-Sync |  | +  | | Shift + Menu | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

