























 
































 


Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 PP	 Back / Return
 I-II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide / EPG / -/--
 P<P	 Fav / Marker / PC
 Menu	 Menu / Home

Original	Rechange
 Info	 Info / Angle
 Left	 Left
 Up	 Up
 P+	 CH+ / Page+
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Vol-	 Vol-
 Vol+	 Vol+
 Red/Sound	 Red / Netflix / Search
 Red/Sound	 Sound / Title
 Green/Picture	 Green / APP / Repeat
 Green/Picture	 Picture / Format
 Yellow/Feature	 Yellow / YouTube / Repeat
 Blue/Install	 Blue / Prime Video / Random
 TV	 TV/Radio /
 AV	 AV / Input / RDS





	Original	Recharge	
	[≡]	 Text / Goto	
	[/≡]	 +  Shift + Text /	
	[≡o]	 Sleep / Timer	
	[≡+]	 Stop / Hold	
	[≡x]	 Setup / OPT /	
	[≡♦]	 Zoom / Size	
	[≡?]	 Smart / List	
	[≡i]	 Display / Media	

	Original	Recharge

