


 
 
 
 

 
 
 
 
 

 
 
 
 

 

 




 

 




 
 


 




 

 
 
 
 
 
 
 
 

 

 




 

 









 

 





 
 
 
 
 
 




Original	Rechange	Original	Rechange
	Power		Power
	[+]		Info
	(<I>)		Format
	Mute		Mute
	Direct Tv Rec		TV/R
	[+]/Aspect		3D
	N		Smart
	Menu		Menu
	TV/AV		AV
	Up		Up
	Down		Down
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	OK		Ok
	Red		Red
	0/VCR		0
	Green		Green
	Yellow		Yellow
	Blue		Blue
	TV/Text		Text
	[≡ ♦]/F.P.		Subt
	[≡ i]/Index		List
	[≡ +]/Hold		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original		Recharge		Original		Recharge	
	Power DVD		Power				
	Rec DVD		Rec				
	Programme Up		Ch +				
	Programme Down		Ch -				
	>> DVD		>>				
	<< DVD		<<				
	Play DVD		Play				
	Pause/Step DVD		Pause				
	Stop DVD		Stop				

