







Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Liste	 Smart / List
 EPG	 Guide / EPG / -/--
 PPV	 D.Menu / Top
 Dienste	 Display / Media
 Up	 Up
 Left	 Left

Original	Rechange
 OK	 OK
 Right	 Right
 Down	 Down
 P+	 CH+ / Page+
 Zurück	 Back / Return
 Vol+	 Vol+
 P-	 CH- / Page-
 Esc / TV	 Exit / Cancel / Clear
 Vol-	 Vol-
 Text	 Text / Goto
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TV / Radio	 TV/Radio /
 Opt	 Setup / OPT /





Original	Recharge	Original	Recharge
	i		Info / Angle
	Menu		Menu / Home

